

Fixed Screens Maintenance Recommendations

We recommend the following window screen maintenance and care schedule in order to protect your fixed window screen for years to come and to minimize unnecessary window screen damage and repair:

- Once a year, use warm soapy water and a soft brush to clean the window screen bar, clips and mesh.
- Remove unwanted debris such as small stones, dust and pet hair from the clips, and perimeter gasket (for 300 series screen) on a regular basis.
- To help keep your window screen clean and minimize the chance of damage, it is highly recommended that you removed the fixed screens and store them, if they will not be used for an extended period of time (i.e. the winter season).