



## **UNIVERSAL SERIES™**

## Operation Guide - Awining Window


## **OPENING THE WINDOW**

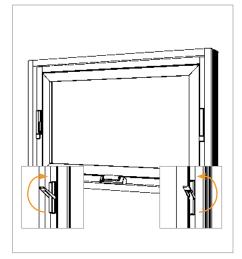

1. Lift window locks to up position.

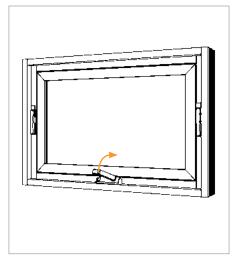


2. Lift operator arm.

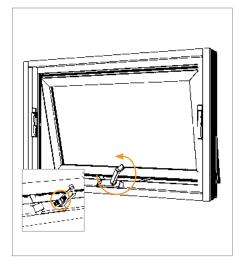


3. Spin operator counter clockwise. Once open, press release tab at base of operator arm to lower.


## **CLOSING THE WINDOW**

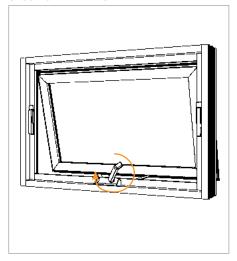

1. Lift operator arm. Spin operator clockwise.

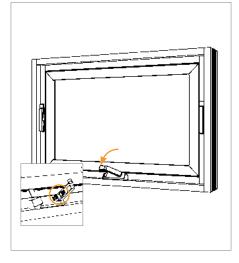

2. Press release tab at the base of the operator arm. Lower operator arm.

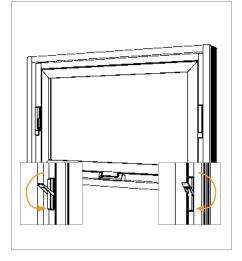

3. Lower window locks to down position.