



UNIVERSAL SERIES™

Operation Guide - Casement Window (Outswing)

OPENING THE WINDOW

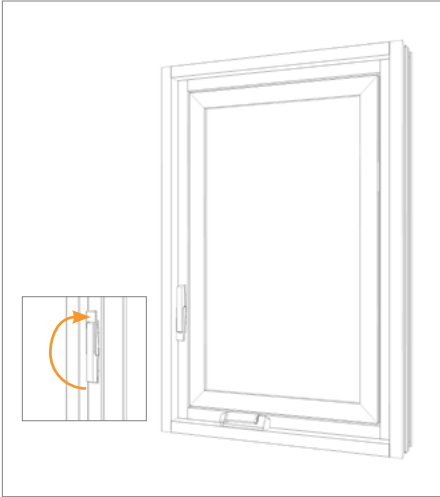

1. Lift window lock to up position.

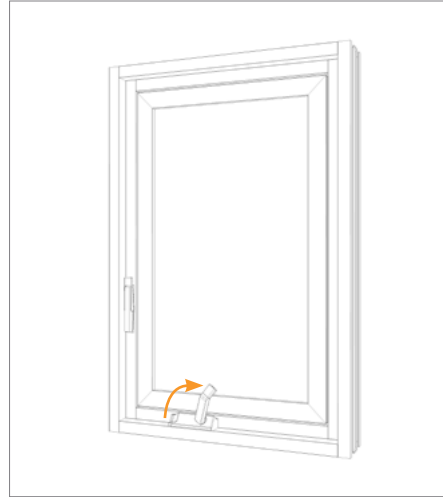

2. Lift operator arm.




3. Spin operator counter clockwise.


CLOSING THE WINDOW



1. Spin operator clockwise.

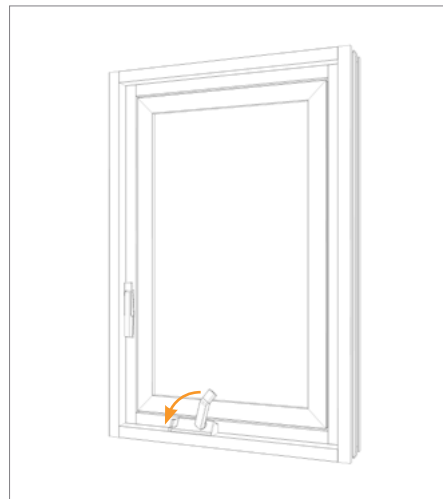

2. Press release tab at the base of the operator arm. Lower operator arm.

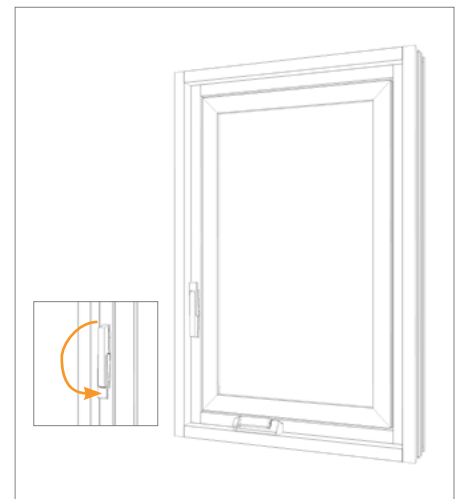

3. Lower window lock to down position.